

Register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome)

HP8320

The on function activates when the appliance is switched on. The function provides additional shine and reduces frizz. When the function is on, a special sound may be made and a softing sound may be heard, which is normal and caused by the ions that are generated.

Slide the closing lock (O) to unlock the appliance.

Comb your hair and take a section that is not wider than 5cm for straightening.

Note: For thicker hair, it is suggested to reheat the hair ends for 5 sec.

Place the hair between the straightening plates (O) and press the handles together.

Slide the straightener down the length of the hair in a single motion (max. 5 seconds) from root to end without stopping to prevent overheating.

To create frills, slowly rotate the straightener in half-circle motion towards (or away from) the hair to create the hair ends and let the hair glide off the plates.

To straighten the rest of your hair, repeat steps 4 to 6.

Always hold the appliance and unplug it.

Place it on a heat-resistant surface until it cools down.

Clean the appliance and straightening plates by damp cloth.

Lock the straightening plates (O).

Keep it in a safe and dry place. Place it on a dry towel. You can also hang it with the hanging loop (O).

Specifications are subject to change without notice. © 2014 Koninklijke Philips N.V. All rights reserved.

3140 035 36983

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Read this important manual carefully before you use the appliance and keep it for future reference.

**WARNING:** Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Do not wind the mains cord round the appliance.

Wait until the appliance has cooled down before you store it.

Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.

Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

Avoid the mains cord from coming into contact with the hot parts of the appliance.

Keep the appliance away from flammable objects and material when it is switched on.

Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

Only use the appliance on dry hair. Do not operate the appliance with wet hands.

Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

The heating plates have coating on. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

If the appliance is used on colour-treated hair, the heating plates may be treated. Before using it on artificial hair, always consult your distributor.

Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpected hazardous situation for the user.

Do not insert metal objects into openings to avoid electric shock.

**Electromagnetic fields (EMF)**

This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

**Environment**

Your product is designed and manufactured with high quality materials and components, which are recycled and reused when this crossed-out wheeled bin symbol is attached to a product. It means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

**Preparation for your hair:**

Wash your hair with shampoo and conditioner.

Blow dry your hair with a brush.

Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

The on function activates when the appliance is switched on. The function provides additional shine and reduces frizz. When the function is on, a special sound may be made and a softing sound may be heard, which is normal and caused by the ions that are generated.

Slide the closing lock (O) to unlock the appliance.

Comb your hair and take a section that is not wider than 5cm for straightening.

Note: For thicker hair, it is suggested to reheat the hair ends for 5 sec.

Place the hair between the straightening plates (O) and press the handles together.

Slide the straightener down the length of the hair in a single motion (max. 5 seconds) from root to end without stopping to prevent overheating.

To create frills, slowly rotate the straightener in half-circle motion towards (or away from) the hair to create the hair ends and let the hair glide off the plates.

To straighten the rest of your hair, repeat steps 4 to 6.

Always hold the appliance and unplug it.

Place it on a heat-resistant surface until it cools down.

Clean the appliance and straightening plates by damp cloth.

Lock the straightening plates (O).

Keep it in a safe and dry place. Place it on a dry towel. You can also hang it with the hanging loop (O).

Specifications are subject to change without notice. © 2014 Koninklijke Philips N.V. All rights reserved.

3140 035 36983

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Read this important manual carefully before you use the appliance and keep it for future reference.

**WARNING:** Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.

When the appliance is connected to the power, never leave it unattended.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Do not wind the mains cord round the appliance.

Wait until the appliance has cooled down before you store it.

Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.

Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

Avoid the mains cord from coming into contact with the hot parts of the appliance.

Keep the appliance away from flammable objects and material when it is switched on.

Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

Only use the appliance on dry hair. Do not operate the appliance with wet hands.

Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.

The heating plates have coating on. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

If the appliance is used on colour-treated hair, the heating plates may be treated. Before using it on artificial hair, always consult your distributor.

Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpected hazardous situation for the user.

Do not insert metal objects into openings to avoid electric shock.

**Electromagnetic fields (EMF)**

This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

**Environment**

Your product is designed and manufactured with high quality materials and components, which are recycled and reused when this crossed-out wheeled bin symbol is attached to a product. It means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

**Preparation for your hair:**

Wash your hair with shampoo and conditioner.

Blow dry your hair with a brush.

Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

**Note:** Ensure that you select a temperature setting that is suitable for your hair. Always select a lower setting when you use the straightener for the first time.

1 Connect the plug to a power supply socket.

2 Select temperature setting for your hair. I for low temperature setting, II for high temperature setting.

3 Blow-dry your hair with a brush.

4 Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

**Tip**

It is suggested to keep the heat plates locked before use.

Frequent users are recommended to use heat protection products when straightening.

Use straightener only when your hair is dry.

Индикатор за зареждане (O) светва.

Със 60 секунди време за е зареждане.

Функцията за ионизиране се активира, когато уредът е включен. Функцията може да издава специален звук, който е нормален и е причинен от ионите, които са генерирани.

3 Плъзнете заключилката (O) надолу, за да отключите уреда.

Следете за косата си и вземете участък, не по-голям от 5 cm за изправяне.

Забележка: За по-гъста коса е препоръчително да направите повече нишки.

3 Плъзнете горната на мигаща лампа напредната пластини (O) и пригответе административна пластини (O).

6 Плъзнете горната на мигаща лампа напредната на косата с едно движение (макс. 5 секунди) от корена до краищата, без да спрете, за да не прегрее косата.

3 За да създадете мекота, бавно завъртете пръста за изправяне в полукръг навън (виж илюстрация) около дъното на косата, докато останата част се навишава от пръста.

7 За да изправите останата част от косата, от плетете стъпки от 4 до 6.

1 Изключете уреда.

1 Изключете уреда и вземете участък от косата.

2 Оставете времето върху топлоустойчива повърхност, докато се охладят.

3 Плъзнете уреда и изправяте пластини с мекота коса.

4 Застопорете изправящите пластини (O).

5 Пригответе уреда на безопасна и суха повърхност без прах. Монете също да го охладите на косата за охладеност (O).

3 Гаранция и сервис

Ако се нуждаете от информация, свържете за помощ на персонала, или майте помощ, посетете Интернет сайта на Philips на адрес [www.philips.com](http://www.philips.com) или се свържете с обслужването на клиенти на имения на Philips във вашата страна (телефонно или номер монета, да направите в международната гаранционна карта). Ако във вашата страна не е наличен телефонен номер, използвайте адресния електронен адрес на местните гаранционни уреди на Philips.

4 Отстраняване на неизправности

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.

Уреда не работи. Проверете дали уредът е включен и дали е включен правилно. Проверете бутона за топъл контакт.</



